

E5 / G5, E3 / G4, Rescue406 / Precision406

IMPORTANT: Read these instructions thoroughly before attempting to install the HRU. If in doubt seek expert help.

Contents

HRU**

Breakable rod

Washer


Circlip

Cone washer*

Identity Label**

*E3 / G4, Rescue406 /
Precision406 only

** HRU replacement kit only

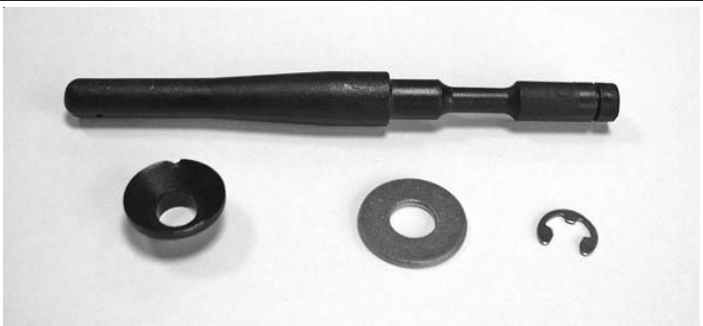

Preparation

Assemble kit by placing breakable rod through replacement HRU, fitting washer and securing with circlip as shown. Do not fit the cone washer at this stage.



Alternative HRU


Mark HRU to show date of expiry 2 years from current date. Refer to the date marking leaflet.

WARNING: Do not attempt to re-use the breakable rod. To ensure correct operation, the breakable rod must be replaced when the HRU is changed.

Assembly

On the enclosure, remove the R-clip and pull the cover slowly off. Remove the EPIRB and stow it in a dry place. **Caution it may activate if wet.** Hold back the lever arm to take up the force of the spring.

(82-966-001 Issue 2)

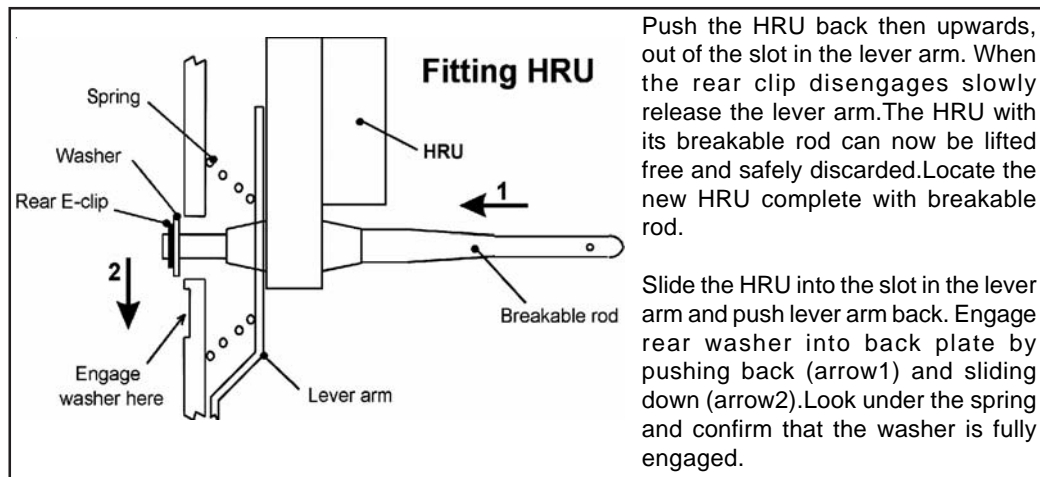

Push the HRU back then upwards, out of the slot in the lever arm. When the rear clip disengages slowly release the lever arm. The HRU with its breakable rod can now be lifted free and safely discarded. Locate the new HRU complete with breakable rod.

Slide the HRU into the slot in the lever arm and push lever arm back. Engage rear washer into back plate by pushing back (arrow 1) and sliding down (arrow 2). Look under the spring and confirm that the washer is fully engaged.

Refit EPIRB E3 / G4 (See diagram 1)

Slide EPIRB into D-shaped foot on lever arm, switches outermost. *Slide the cone washer onto the breakable rod to retain the EPIRB

Refit EPIRB E5 / G5 (See diagram 2)

Bend the antenna and stow behind the rubber button.



Diagram 1



Diagram 2



Refit cover by engaging hole over rod and then snapping into place. Refit R-clip through top of rod. (Refer to images on left for R-clip fitting.)



On side of enclosure, use the identity label to mark new HRU expiry date over old date.

