

# Instruction of Exchange Antenna Element for Adcock Antenna, EA-351A

## 1. Installation

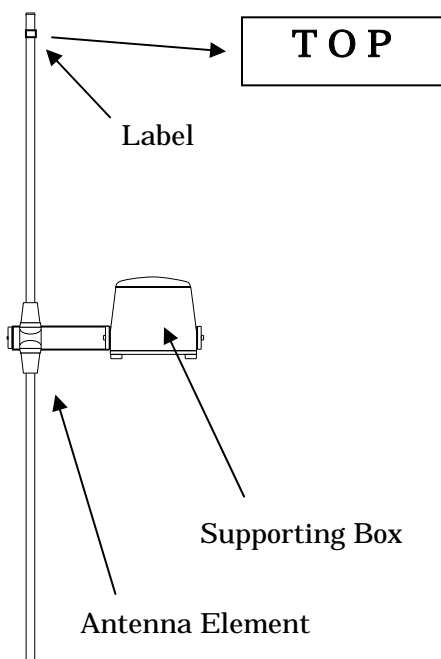


Figure 1

There is an indication, "TOP" on the upper side of an antenna element. (Ref. Figure 1) Set the "TOP" marked side upward.

Do not set the element inversely when you exchange it, or the product does not work normally.

## 2. Connection for Printed Circuit Board inside Supporting Box

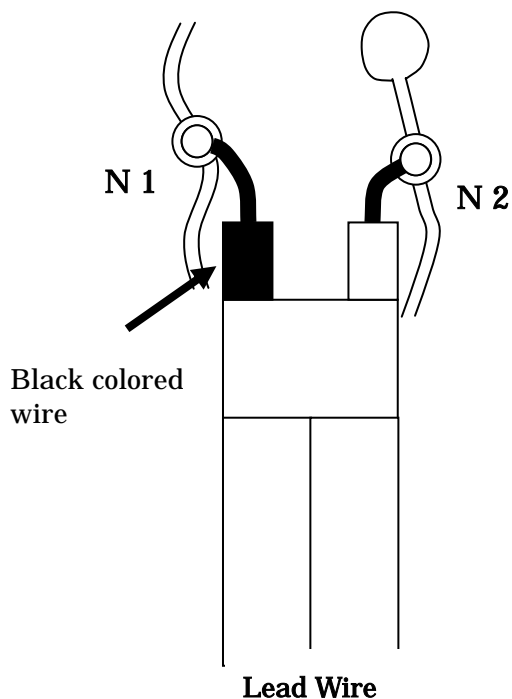


Figure 2

In case of exchanging "N" (North) element, connect the wire (Black colored) to N1 and connect the other wire to N2. (Ref. Figure 2 and 3)

The connection method for S, E, W element is the same as that for N element. (Ref. Chart below)



Figure 3

Element	Black colored wire	The other wire
N	N1	N2
S	S1	S2
E	E1	E2
W	W1	W2

### CAUTION :

Soldered portion between lead wire and Printed Circuit Board are coated by adhesive. Remove that adhesive completely before soldering.